63-5029.fm Page 1 Tuesday, July 13, 1999 3:24 PM

Cat. No.63-5029
OWNER'S MANUAL

Please read before using this equipment.

Watch Gift Set

with Knife

RadioShack®

FEATURES

Your RadioShack Watch Gift Set includes a precision timepiece that combines advanced electronic technology with fashionable design and a multi-purpose, 7-function knife.

The watch's features include:

Daily Alarm and Hourly Chime — lets you set the watch to sound an alarm every day at a preset time, and a chime on the hour.

Date/Time Display — shows the month, date, day of the week, and time in 12- or 24-hour format.

© 1999 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.

Stopwatch — lets you time events lasting from $^{1}/_{100}$ second up to 24 hours and record split times.

Water Resistant — lets you submerge the watch to a depth of 98 feet (30 meters).

Caution: This watch is water resistant, not waterproof. Use it while washing, showering, or playing water sports in shallow water. Do not use it while deep sea diving or platform diving.

Illuminator Dial — at the press of a button, the watch face lights so you can easily see the time in the dark.

The knife has these functions:

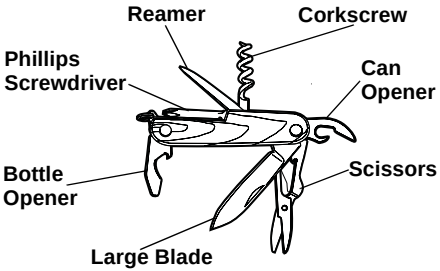

WATCH

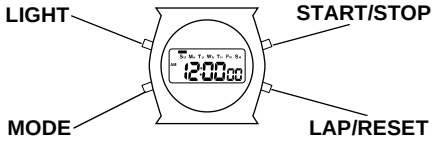

The watch has three modes which you access by pressing **MODE**:

Time/Date — sets and shows the hour, minutes, seconds, and the correct date and day of the week.

Alarm — sets and shows the alarm time.

Stopwatch — times an event from start to finish and can show split times.

To toggle the display between time and stopwatch, press **MODE** once.

To set the alarm/time, hold down **MODE** to set the alarm/ time.

To view the display in the dark, press **LIGHT**. The display lights for about 4 seconds.

To return to the time display from any mode, press **MODE**.

SELECTING THE DISPLAY FORMATS

In the 12-hour time format, **AM** or **PM** appears to the left of the hour. In the 24 hour time format, the hours show from **0** to **23**. To choose between the two formats, from

the time display, hold down **LAP/RESET**, then press **MODE**.

To change between the month/day format and the day/month format, from the time display, hold down **START/STOP**, then press **LAP/RESET**.

SETTING THE DAY AND TIME

1. Hold down **MODE** until the bar above **Mo** flashes. Then press **MODE** again so the bar above **Tu** flashes.
2. Press **LAP/RESET** to reset the seconds to **00**.

3. Repeatedly press **START/STOP** to select the time digits (minutes, hour, and so on) or the day of the week you want to set. The flashing bar appears above the selected item.
4. Press **LAP/RESET** to advance the selected setting.

   Note: Hold down **LAP/RESET** to quickly advance the setting.
5. Press **MODE** to store the settings and return to the time display.

ALARM

You can set an hourly chime and a daily alarm.

The hourly chime sounds at the beginning of each hour, and the daily alarm sounds for 30 seconds at the alarm time you set.

To hear what the alarm sounds like, hold down **LAP/RESET**, then press **START/STOP**.

Turning On/Off the Chime and Alarm

To turn on or off the hourly chime and the daily alarm, from the time display, hold down **LAP/RESET**, then repeatedly press **START/STOP**. The display shows when the chime is turned on and •))) when the alarm is turned on.

For example, if you want both the chime and alarm to sound, be sure both and

•))) appear. If you want only the chime or alarm to sound, be sure only 🔔 or •))) appears.

Setting an Alarm Time

1. Hold down **MODE** until the bar above **MO** flashes.
2. Repeatedly press (or hold down) **LAP/RESET** to advance the hour digits.
3. Press **START/STOP**. The minute digits flash.
4. Repeatedly press (or hold down) **LAP/RESET** to advance the minute digits.
5. Press **MODE** to return to the time display.

When appears, the alarm sounds for 30 seconds at the time you set. To silence the alarm before 30 seconds is up, press **LAP/RESET**.

To view the set alarm time at any time, from the time display, hold down **LAP/RESET**.

STOPWATCH

The stopwatch counts elapsed time in hours, minutes, and seconds up to 24 hours. For the first 40 minutes, it also shows hundredths of a second.

At 24 hours, the stopwatch begins counting from **0 00 00** again.

Follow these steps to operate the stopwatch.

1. Press **MODE**. A bar flashes above **Su**.
2. Press **START/STOP** to start the stopwatch. The bars above both **Su** and **Sa** flash.
3. To measure split time (total time elapsed to that point), press **LAP/RESET** while the stopwatch is running.

   The display stops, but the stopwatch continues to run internally. The bars above **Su**, **TH**, and **Sa** flash to show that the stopwatch is still running.

   After you record the split time, press **LAP/RESET** again to return to the running time display.

Note: Split time is the total elapsed time from the start time.

You can use the split time function as many times as you want until you stop the stopwatch.

4. To stop the stopwatch, press **START/STOP**.
5. Press **LAP/RESET** to reset the display to **0 00 00**.

REPLACING THE BATTERY

If the watch slows or the display dims, follow these steps to replace its 3V lithium CR2016 battery. We recommend a RadioShack battery.

1. Use a Phillips screwdriver to remove the four small screws on the back of the watch's case.

   Note: Be careful! The screws are extremely small and can be easily misplaced.

2. Remove the back of the watch's case.

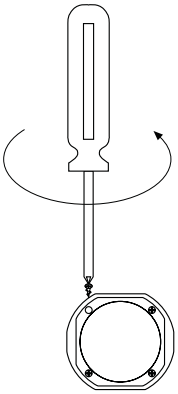

3. Remove the 2 screws on the battery holder's long tab, and lift the holder out of the way.

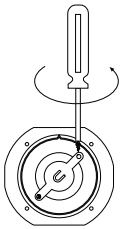

4. Remove the old battery, and install a new one with the positive (+) side up.

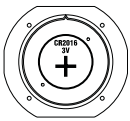

Warning: Dispose of the old battery promptly and properly. Do not burn or bury it. Keep button-cell batteries away from children. Swallowing a button-cell battery could be fatal.

Caution: Use only a fresh battery of the required size and recommended type. Always remove an old or weak battery.

5. Replace the battery holder and secure it with its screws.
6. Hold the watch with the buckle at the top and replace the back of the case so the logo is right side up. Then secure the case back with its screws.

Note: If you replace the case back incorrectly, the alarm will not function properly.

CARE

To enjoy your watch for a long time:

- Use and store the watch only in normal temperature environments.
- Handle the watch gently and carefully. Don't drop them.
- Wipe the watch with a damp cloth occasionally to keep them looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and invalidate its warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Source ..... CR 2016 3V Lithium Battery (Supplied)

Battery Life (Approx.) ..... 18 Months

Clock Accuracy ..... ±20 Seconds/Month

Operating Temperature ..... 32–109°F (0–43°C)

Dimensions (HWD):
$9^{11}/_{16} \times 1^{7}/_{16} \times {}^{7}/_{16}$ Inches
(246 × 40 × 11 mm)

Weight ..... 0.917 oz (26 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; *(Continued)*

(Continued) (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *04/99*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

07A99 Printed in Hong Kong